KitchenAid® COOKTOP PARTS

30" Slide−In Range
DESIGNER STYLE
Convection Oven

For Models: KESH307HWH4, KESH307HBL4, KESH307HBS4
(White) (Black) (Black Stainless)

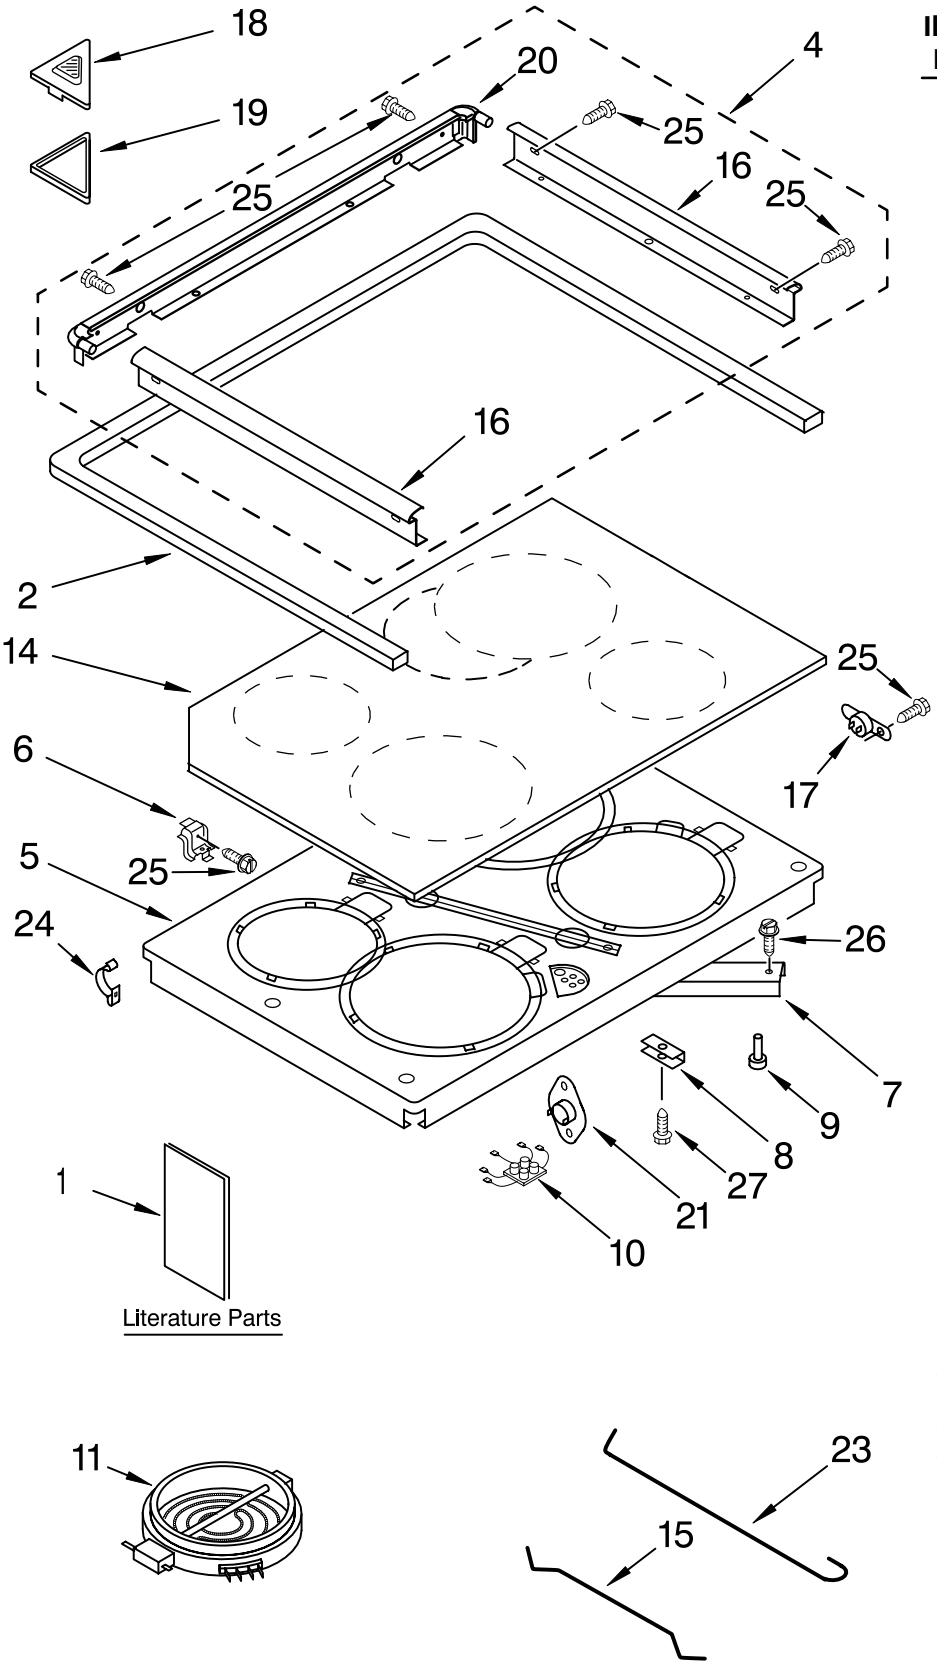

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	LIT9752043	Installation Instructions
	LIT9753846	Use & Care Guide
	LIT4449066	Cookbook T/C Ovens
	LIT9752686	Smart & Easy Guide
	LIT9753027	Tech Sheet
	LIT9753028	Wiring Diagram
	LIT9752775	Template, Anti−Tip
	LIT3191638	Safer Cooking Tips
2	9754103	Gasket, Cooktop
4		Frame, Cooktop
	9781832PW	White
	9781832PB	Black
5	9752892	Support, Element
6	9751629	Bracket, Pivot
	9752003	Washer (2)
7	9781553	Brace, Support
8	9753691	Support Clips (4)
9		Bumper, Rubber
	9780771	Black (4)
	9750969	White (4)
10	9781936	Hot Light
11		Element, Surface
	8272564	1500W − LR
	9753997	2200W − RR
	9753996	1800W − RF
	8272563	1000/2400W − LF
14		Cooktop, Ceran
	9753879CW	White
	9753879CB	Black
15	9781460	Rod, Small Ceran Element
16		Trim, Side Frame
	9781828PW	White
	9781828PB	Black
17	341196	Thermo−Disc
18	9751800	Vent, Cover
19	9751841	Gasket, Vent
20		Trim, Rear Frame (Incls. End Caps)
	9781831PW	White
	9781831PB	Black
21	9751984	Bimetal
23	9781459	Rod, Large Ceran Element
24	98997	Clip, Wire
25	9780265	Screw, 10 x 3/8
26	9780272	Screw, 10 x 3/4
27	9751871	Screw, 10−16 x 1

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: KESH307HWH4, KESH307HBL4, KESH307HBS4

(White) (Black) (Black Stainless)

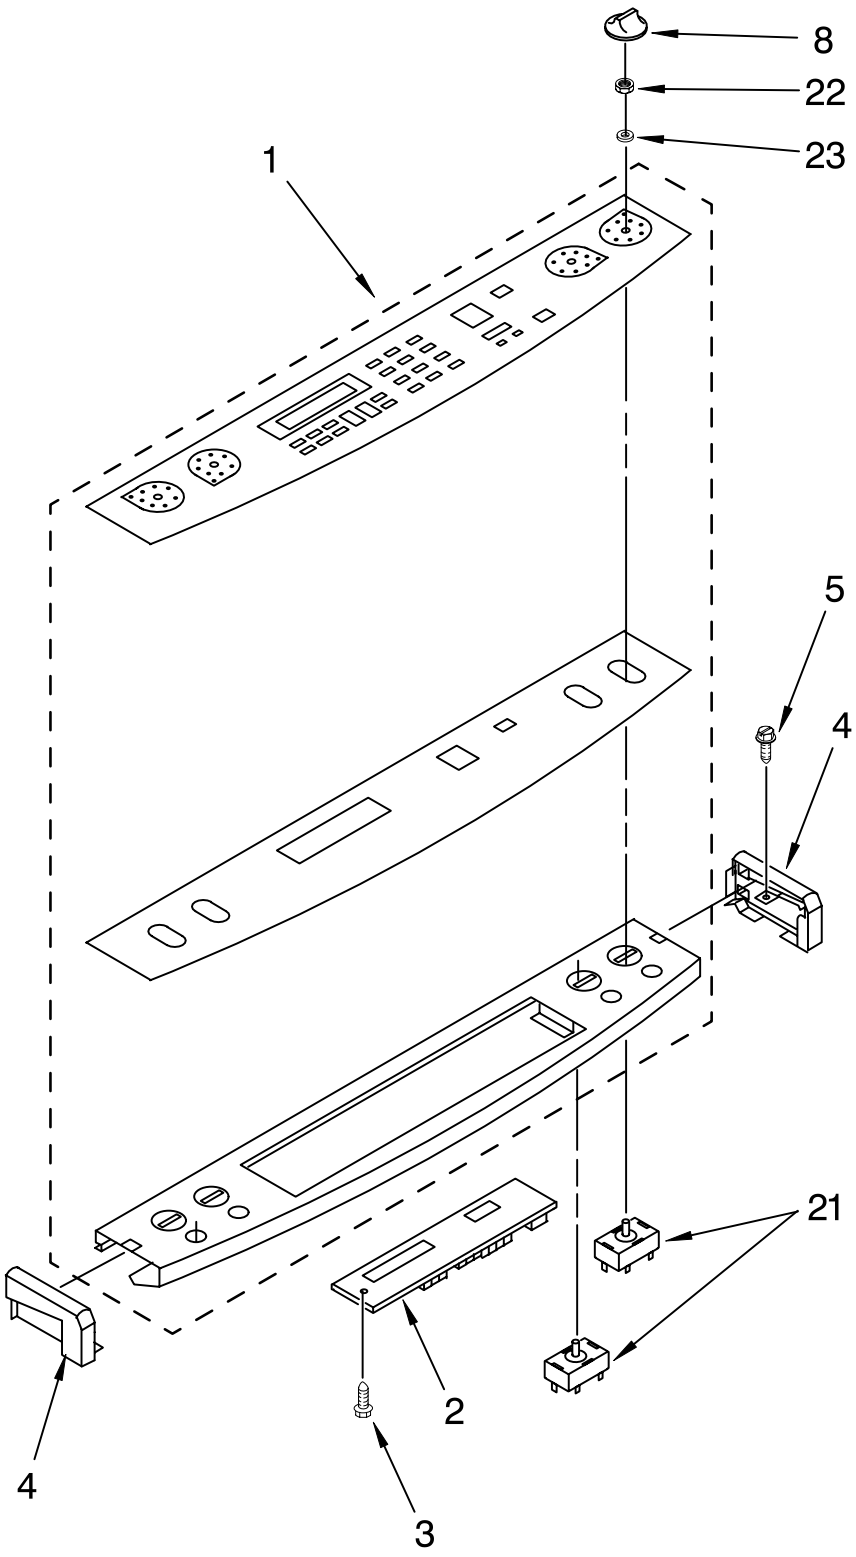

Illus. No.	Part No.	DESCRIPTION
1		Console, Glass
	9781969CW	White
	9781969CB	Black
2	9781980	Timer, Electronic
3	9780271	Screw, (2)
4		End Cap
		(Right Hand)
	9751040FW	White
	9751040FB	Black
		(Left Hand)
	9751039FW	White
	9751039FB	Black
5	9780265	Screw, (4)
		10 x 3/8
8		Knobs, Control (8)
	9750372FW	White
	9750372FF	Black
21		Switch, Infinite
	9751364	1500W − LR
	9751363	1800W − RF
	9751362	2200W − RR
	9751758	1000/2400W − LF
22		Nut, Mounting
	422617	Single Element
	9751711	Dual Element
23	9781455	Seal, Switch (4)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR AND DRAWER PARTS

For Models: KESH307HWH4, KESH307HBL4, KESH307HBS4

(White) (Black) (Black Stainless)

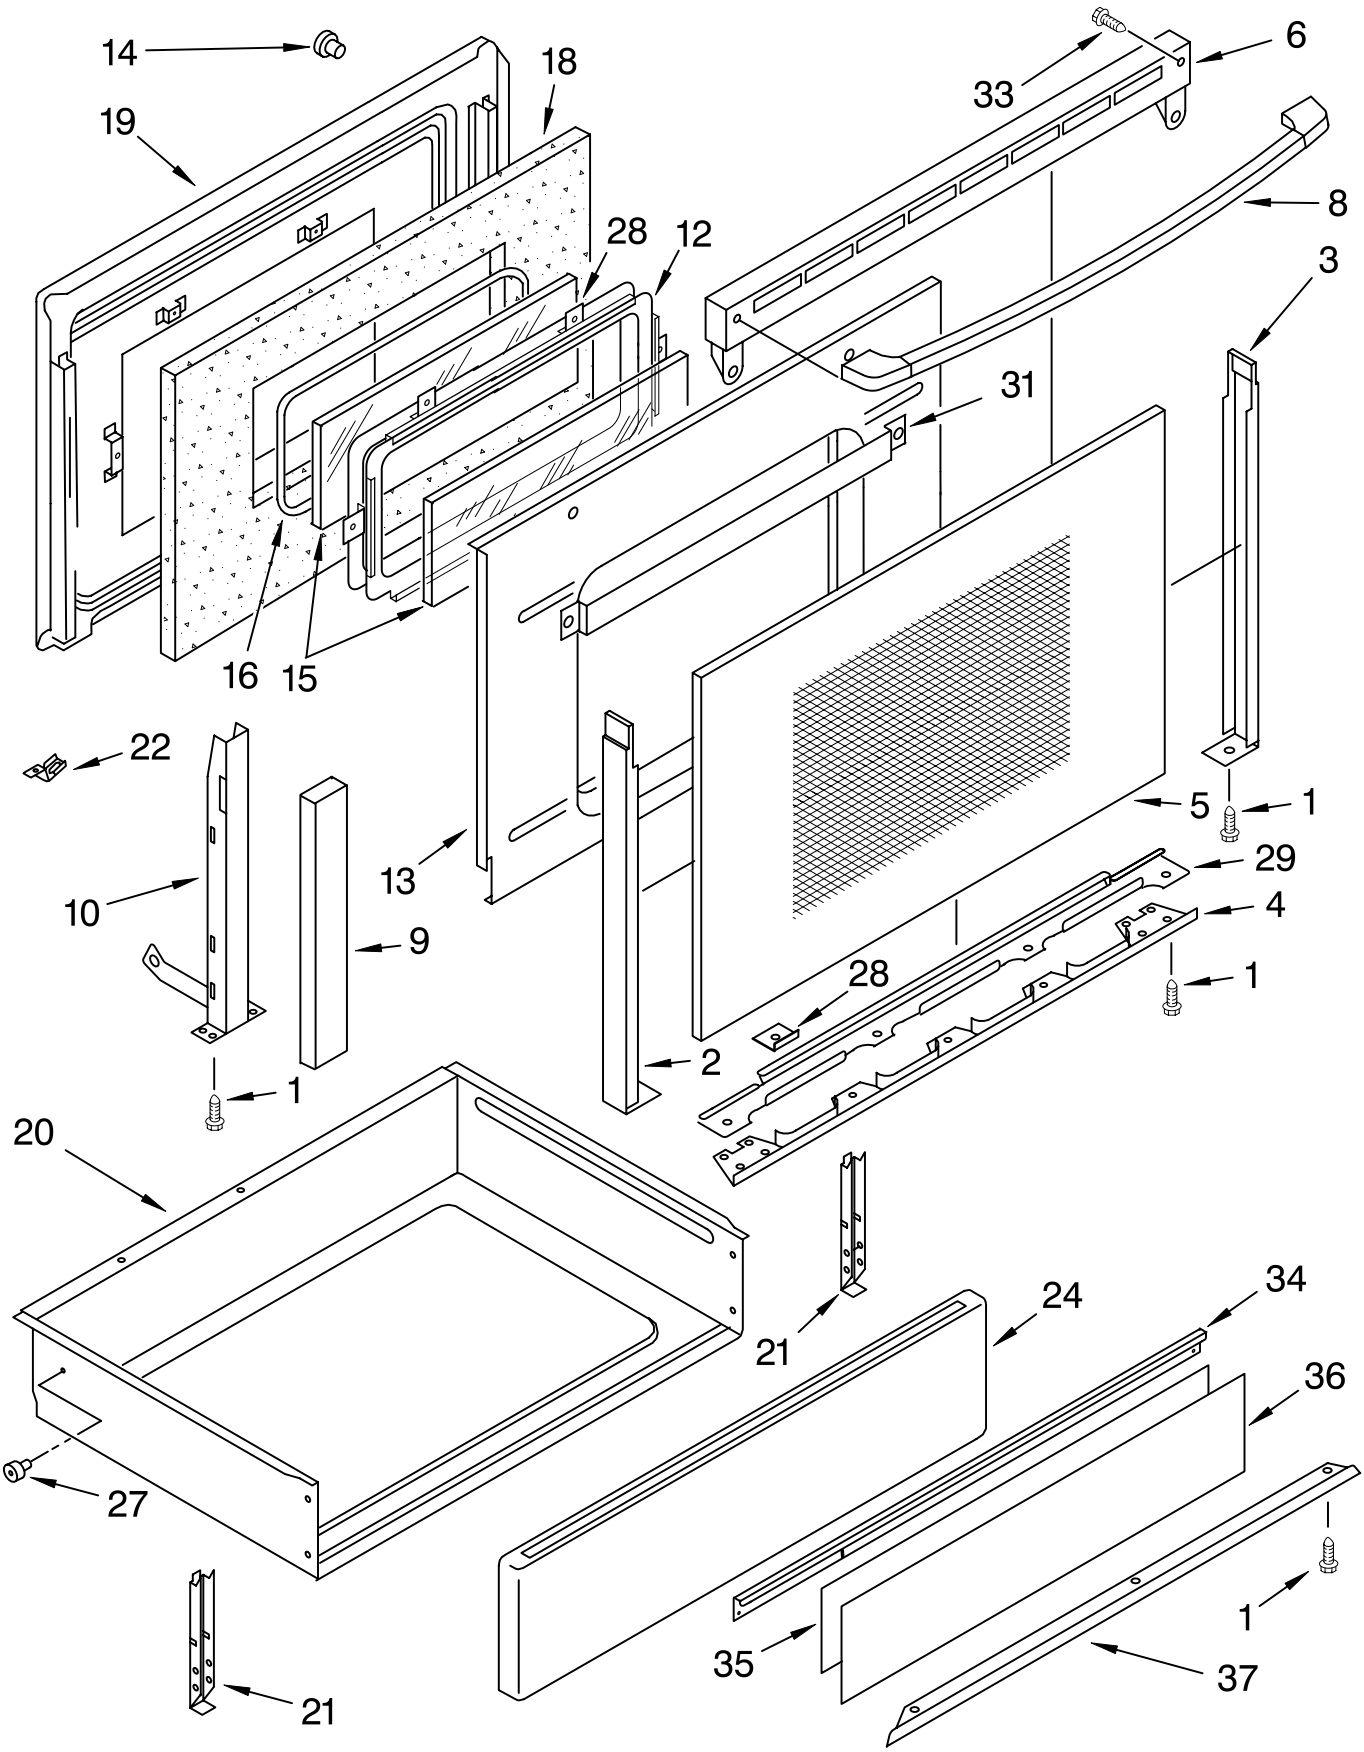

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR AND DRAWER PARTS

For Models: KESH307HWH4, KESH307HBL4, KESH307HBS4

(White) (Black) (Black Stainless)

Illus. No.	Part No.	DESCRIPTION
1	9780265	Screw, 10−16 x 3/8
2		Trim, Door−Left
	9782003PW	White
	9782003PB	Black
3		Trim, Door−Right
	9782004PW	White
	9782004PB	Black
4		Trim, Door Bottom
	9781209PW	White
	9781209PB	Black
5		Glass, Door
	9781627PW	White
	9781627PB	Black
	9754041	Black Stainless
6		Vent, Door
	9753498GW	White
	9753498GB	Black
	9781659	Gasket, Door Vent
	9781490	Seal, Door Vent Side
8		Handle, Door
	9780523PW	White
	9780523PB	Black
9	9781449	Gasket, Door Glass
10	9750234	Hinge, Door R or L
12	9781602	Frame, Window
13	9781586	Shield Door
14	9780771	Bumper, Rubber
15	9781593	Glass, Door (2)
16	9781587	Seal, Glass
18	9754006	Insulation
19	9781600GM	Liner, Door
20		Drawer & Roller
	9780583	White, Black Models
	9750257	Black Stainless Model
21	9750169	Bracket, Drawer
22	9750676	Retainer, Glass
24		Front, Drawer
	9750168PW	White
	9750168PB	Black
	9750569PB	Black Stainless
	90296	Clip
27	423713	Support, Roller
28	9781502	Retainer, Glass
29	9781771	Deflector, Steam
31	9750693	Channel, Heat
33	9781072	Screw
34	9750614PB	Trim, Upper
35	9753329	Spacer
36	9754062	Panel, Drawer
37	9750613PB	Trim, Lower

OVEN CHASSIS PARTS

For Models: KESH307HWH4, KESH307HBL4, KESH307HBS4

(White) (Black) (Black Stainless)

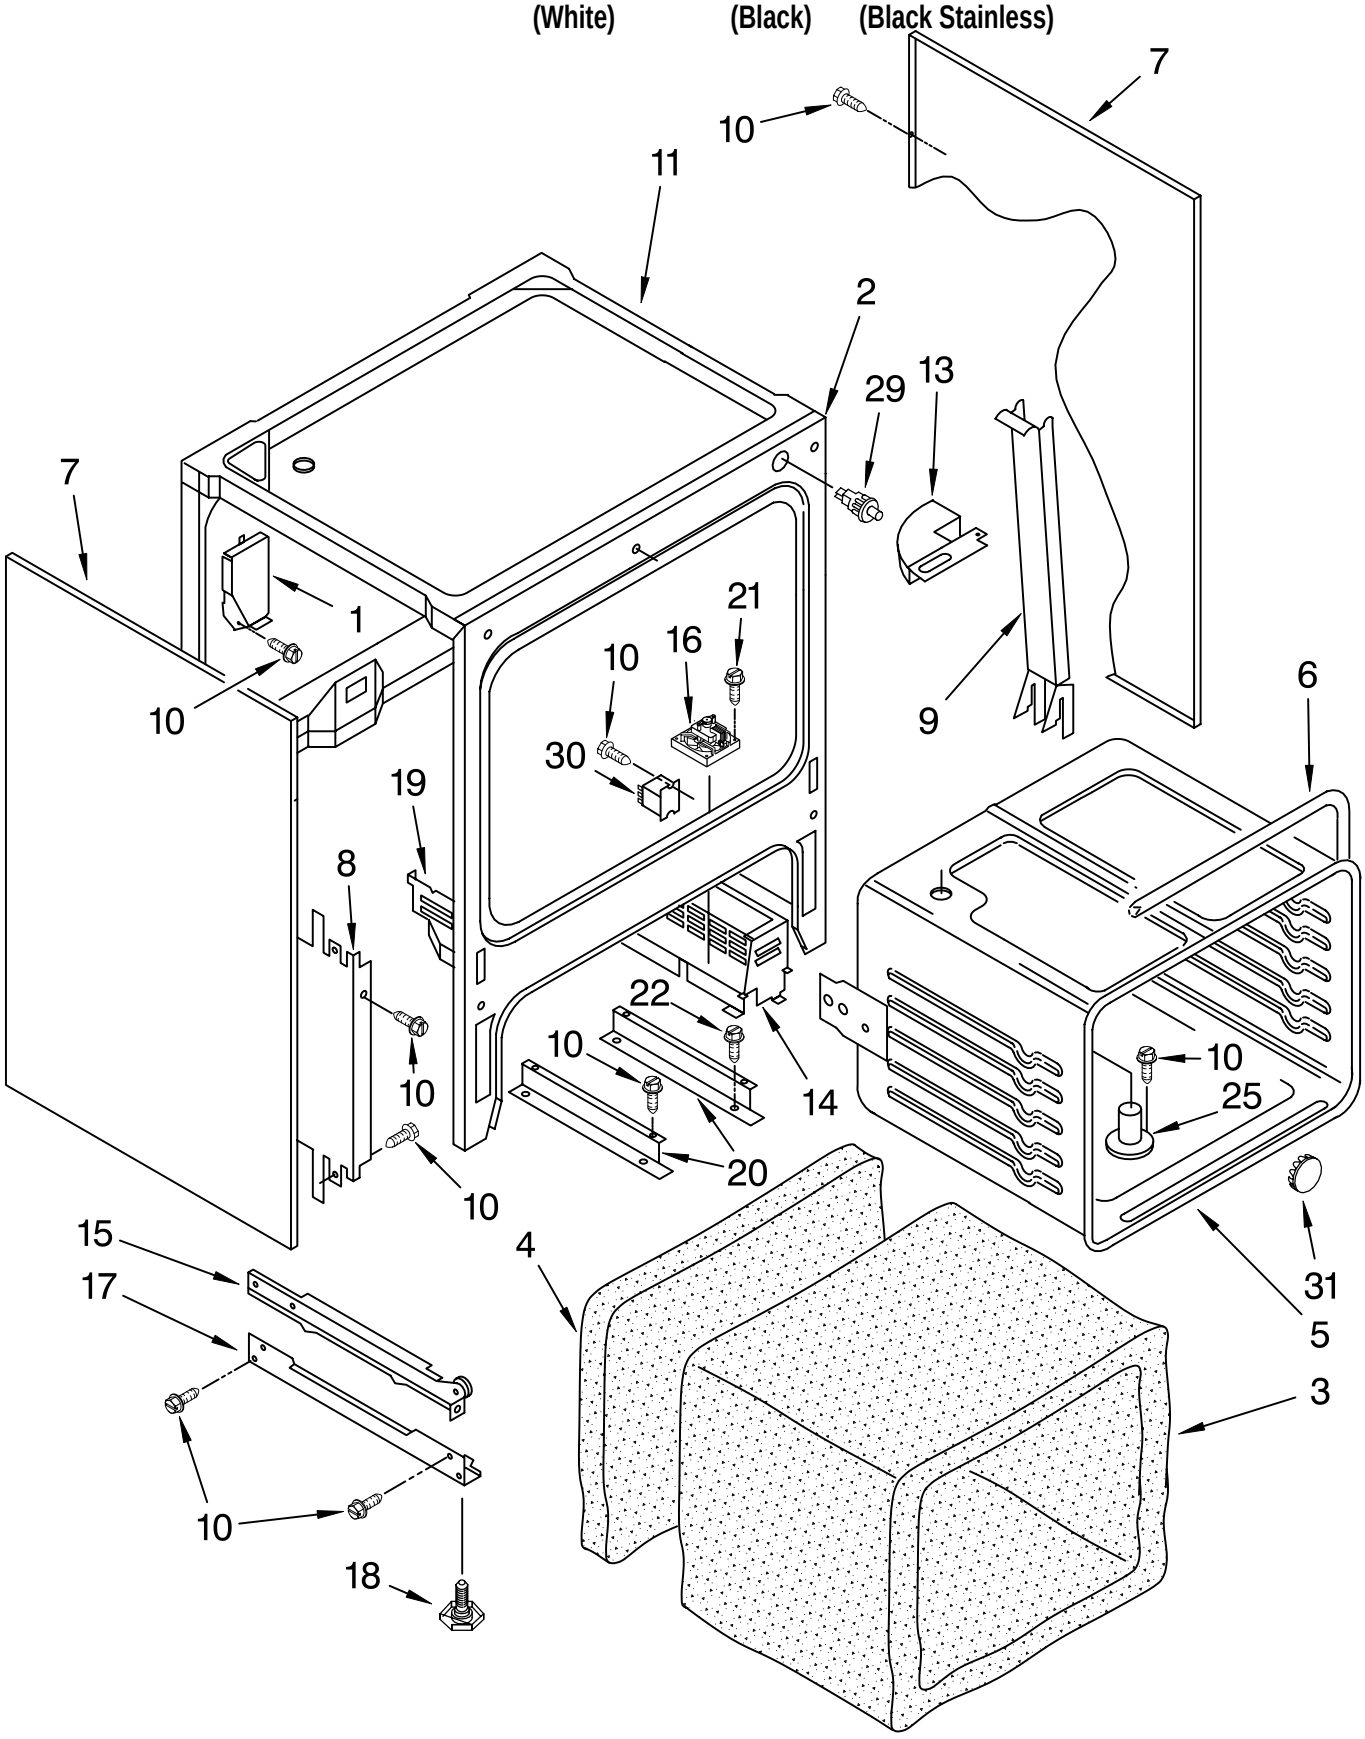

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN CHASSIS PARTS

For Models: KESH307HWH4, KESH307HBL4, KESH307HBS4

(White) (Black) (Black Stainless)

Illus. No.	Part No.	DESCRIPTION
1	9751350	Vent Box, Oven
2	9750514GM	Chassis, Front
3	9754003	Insulation, Wrap
4	9754011	Insulation, Rear
5	9753744GM	Oven Liner
6	3191649	Gasket Oven
7		Oven, Side L or R
	9781907PW	White
	9781907PB	Black
8	9780664	Shield, Insulation
9	9751789	Fan Duct, Side
10	9780265	Screw, 10−16 x 3/8
11	9752637	Burner Box
13	9751653	Duct, Top
14	9751060	Support, Fan
15		Rail, Drawer
	9750223	Left
	9750224	Right
16	9751020	Motor, Fan
17	9750147	Bottom Rail (2)
18	312701	Foot, (4)
19	9750149	Hinge, Door L or R
20	9781904	Support Rail, Pan
21	9751808	Screw, 8−18 x 1
22	9780272	Screw, 10−16 x 1/2
25	9753091	Vent, Tube
29	9781581	Door Switch
30	9751948	Relay, Dlb.
31	9780578	Button, Plug

OVEN PARTS

For Models: KESH307HWH4, KESH307HBL4, KESH307HBS4

(White) (Black) (Black Stainless)

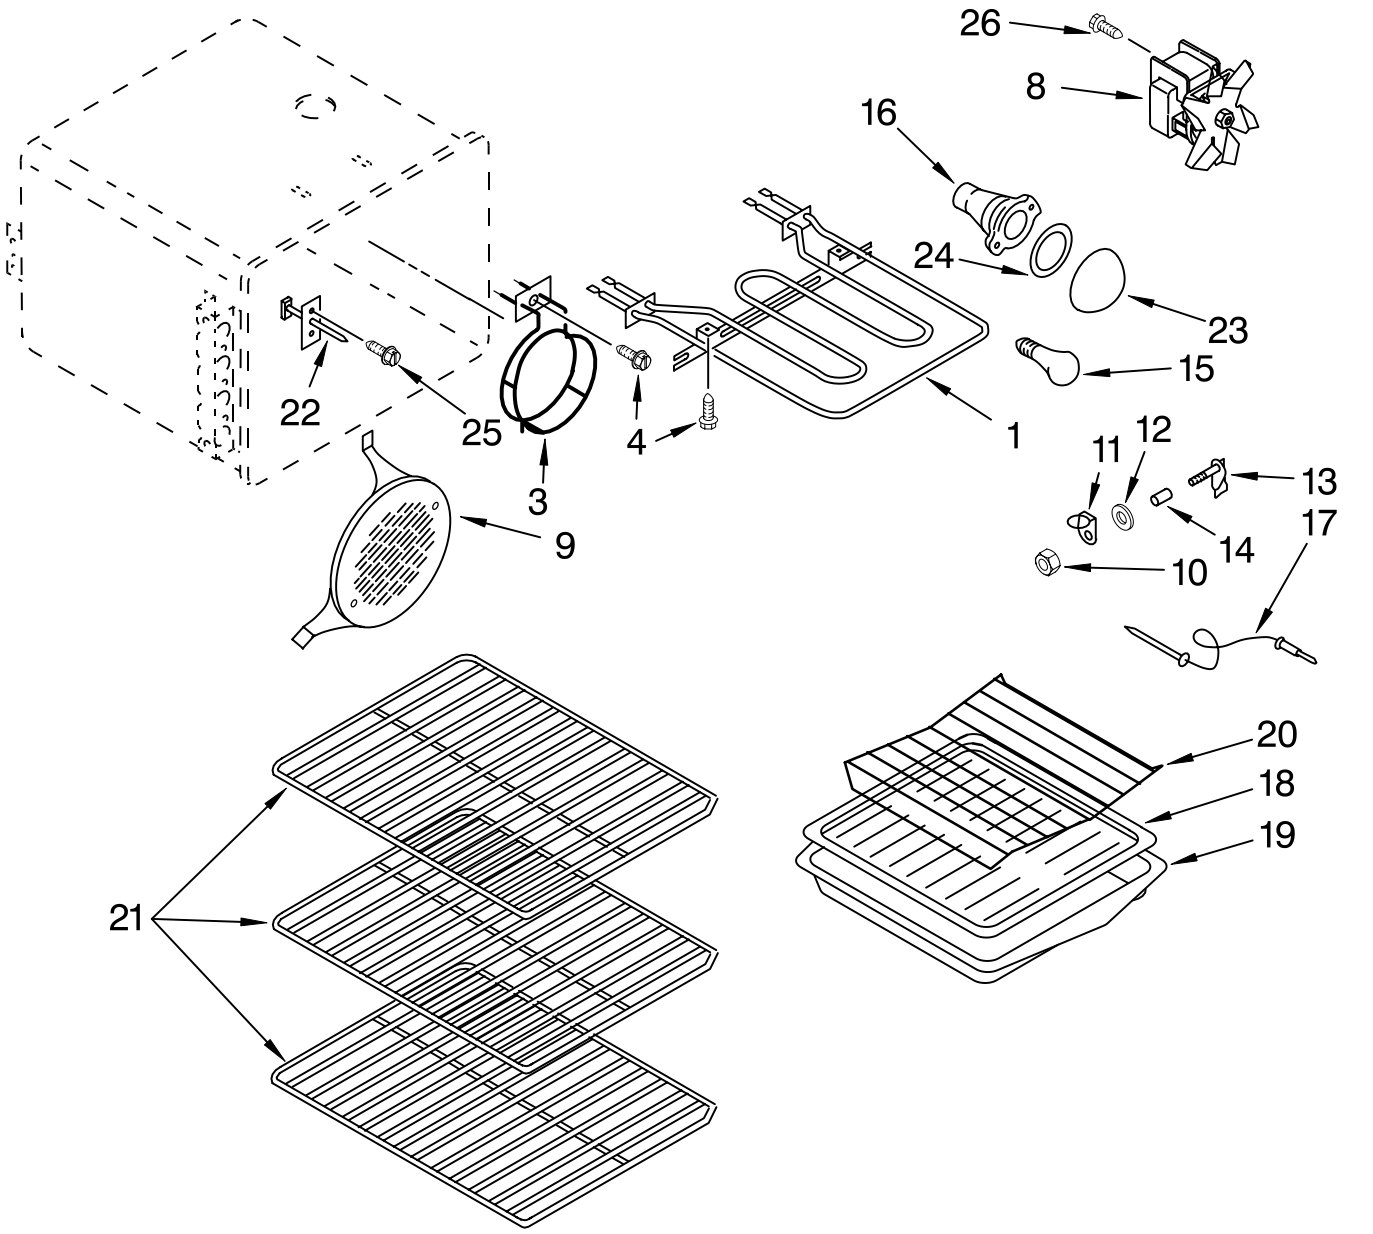

Illus. No.	Part No.	DESCRIPTION
1	9750967	Element, Broil
3	9751447	Element, Convection
4	9781509	Screw, Elements 8−32 x 3/8
8	9781543	Assembly, Fan
9	9751904GM	Baffle, Convection
10	4167277	Lock−Nut, Cvr.Jack
11	4167266	Jack Cover
12	4163975	Gasket
13	4173575	Receptacle, Probe
14	3179672	Spacer, Tubing
15	8935	Bulb, Oven
16	9781050	Light, Socket
17	3150144	Probe
18	420104GM	Grill, Broiler
19	420101GM	Pan, Broiler
20	9750827	Rack, Roasting
21	9750823	Rack, Standard
22	8053344	Sensor
23	9781049	Lens, Light
24	3184533	Gasket, Lens
25	9780265	Screw, 10−16 x 3/8
26	9780272	Screw, 10 x 1/2"

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

REAR CHASSIS PARTS

For Models: KESH307HWH4, KESH307HBL4, KESH307HBS4

(White) (Black) (Black Stainless)

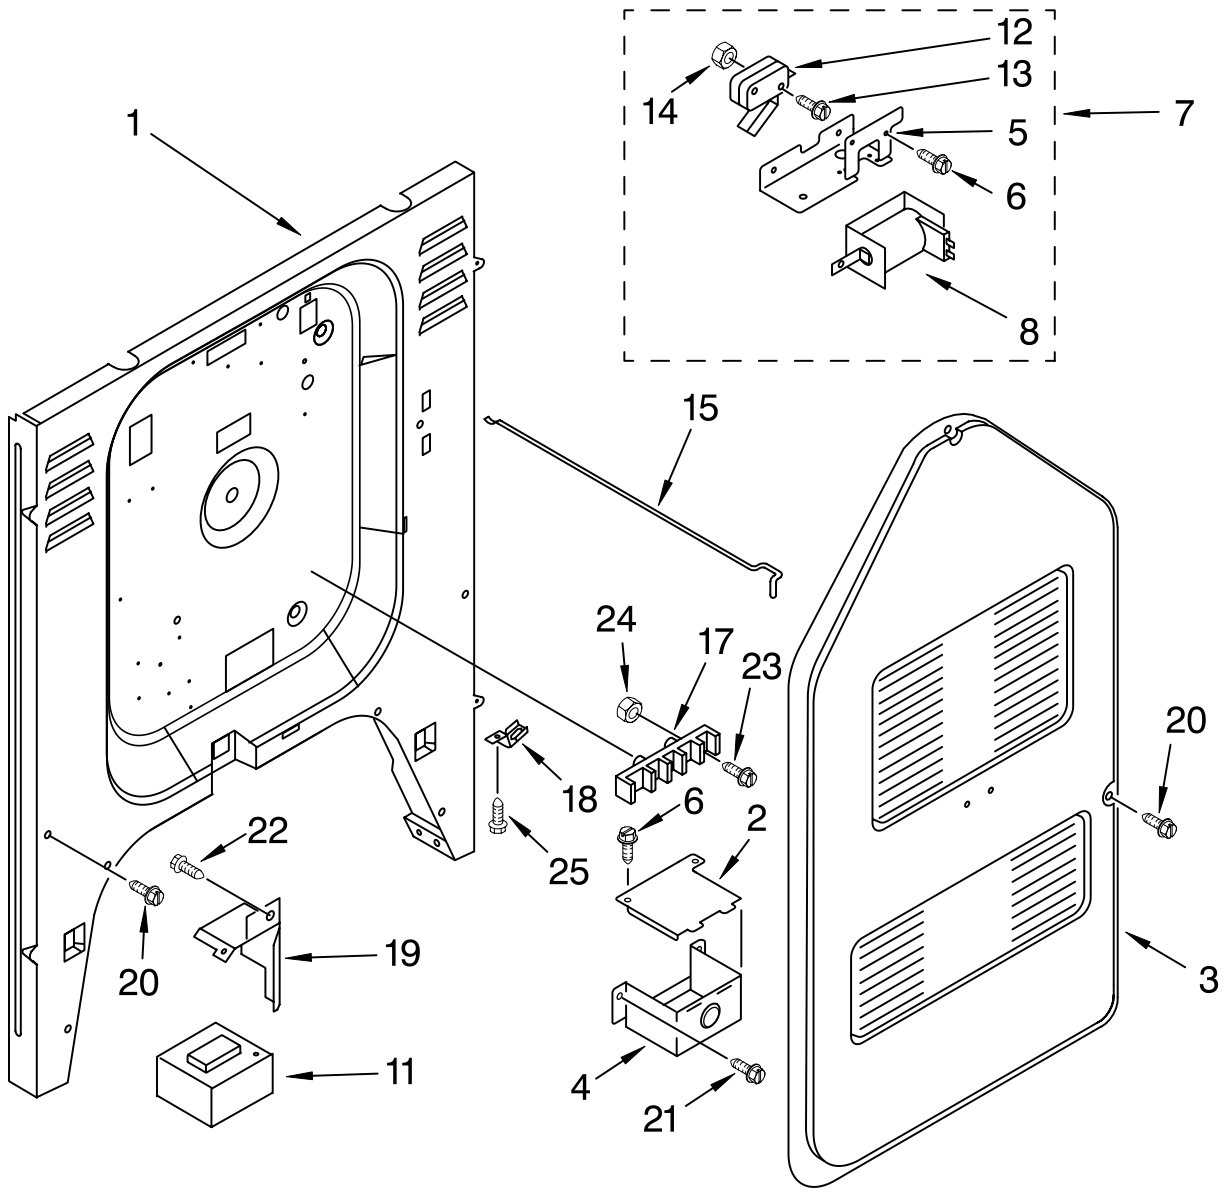

Illus. No.	Part No.	DESCRIPTION
1	9751051	Back panel,Chassis
2	9752345	Cover, Terminal Box
3	9751353	Panel, Rear Cover
4	9752344	Box, Terminal
5	9751418	Bracket, Lock
6	9780265	Screw (2) 10 x 3/8

Illus. No.	Part No.	DESCRIPTION
7	9751439	Oven Lock Assembly
8	9751590	Solenoid
11	9753413	Block, Balance
12	9751763	Switch, Interloc
13	9750887	Screw
14	9750888	Nut
15	9750523	Rod, Lock
17	258076	Terminal Block
18	3169573	Ground Strap
	313660	Clip
	690989	Screw, Grounding

Illus. No.	Part No.	DESCRIPTION
19	9751798	Vent Back, Oven
20	423247	Screw
21	9780272	Screw, 10−16 x 1/2
22	340184	Screw, 10−16 x 1.5
23	98884	Screw, 10−16 x 1
24	112432	Nut, Hex #10
25	690989	Screw, Ground

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

HIDDEN BAKE PARTS

For Models: KESH307HWH4, KESH307HBL4, KESH307HBS4

(White) (Black) (Black Stainless)

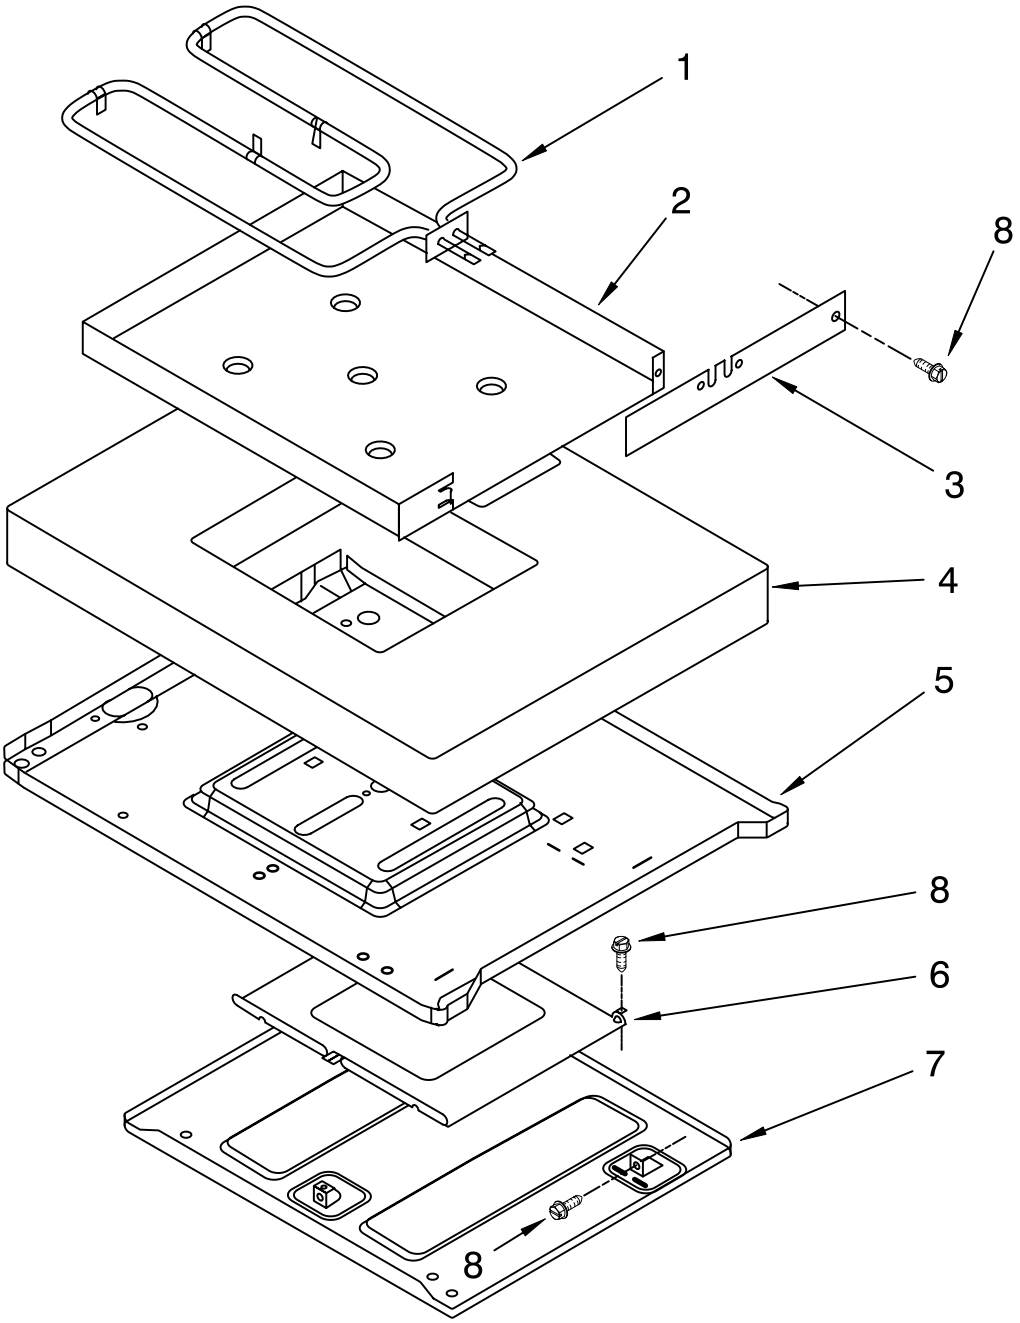

Illus. No.	Part No.	DESCRIPTION
1	9752294	Element, Bake
2	9752228	Pan, Hidden Bake
3	9752250	Cover, Hidden Bake
4	9754005	Insulation
5	9752735	Retainer, Insulation
6	9751641	Plate, Reflector
7	9781025	Shield
8	9780265	Screw, 10−16 x 3/8

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MISCELLANEOUS PARTS

For Models: KESH307HWH4, KESH307HBL4, KESH307HBS4

(White) (Black) (Black Stainless)

Illus. No.	Part No.	DESCRIPTION

SPLICING WIRES−−25FT. LENGTH

242828	Wire, Black 12 Ga. 150°c
242820	Wire, Black 14 Ga. 150°c
242821	Wire, Blue 14 Ga. 150°c
242822	Wire, Brown 14 Ga. 150°c
242830	Wire, Brown 14 Ga. 200°c
242823	Wire, Green 14 Ga. 150°c
242824	Wire, Orange 14 Ga. 150°c
242829	Wire, Red 12 Ga. 150°c
242825	Wire, Red 14 Ga. 150°c
242831	Wire, Red 14 Ga. 200°c
242826	Wire, White 14 Ga. 150°c
242827	Wire, Yellow 14 Ga. 150°c
242832	Wire, Yellow 14 Ga. 200°c

PAINT, TOUCH−UP (1/2oz.)

72017	White
72107	Almond
72109	New Avocado
72108	Coffee
72110	Harvest Gold
**511873	White Porcelain (2 Oz.)

** **NOTE:** The spray paint is Porcelain; All Other Panels are Painted Surfaces.

PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
350956	Almond
261888	New Avocado
261886	Coffee
261890	Harvest Gold
285006	Superior Black
206922	Primer (White)

PAINT, BULK (1 qt.)

799344	White (Uncut)
978883	Almond (Uncut)
261891	Harvest Gold (Uncut)

REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch−Up Self−Clean (1/2 Pt.)

INSULATION

9754003	Insulation, Wrap
9754011	Insulation, Rear

CLEANER, COOKTOP

9753543	Glass Cleaner
3183488	Scraper

ACCESSORIES

241430	Foil, Aluminum Oven (18" X 25')

LUBRICANT

261582	Grease

ANTI−TIP KIT

9751745	Anti−Tip Kit

WIRING HARNESS PARTS

9753943	Harness, Wire (Main Harness)
9781932	Harness, Wire (Cooktop)
9781769	Harness, Wire (Ceran)
9750376	Harness, Wire (Oven Door)
9751139	Harness, Wire (Meat Probe)
9753374	Harness, Wire (Dual Oven Light)
9753683	Harness, Wire (Hidden Bake)
9781656	L2 − Electric
9751868	Grommet, Harness
20082084	Tie, Wire
3196520	Clip, Wire
90016	Clip, Wire
9781767	Harness, Wire (Control, Ceran)